

Assurance Against Radiation Effects on Electronics

Kenneth A. LaBel
ken.label@nasa.gov
Co-Manager, NASA Electronic Parts and Packaging
(NEPP) Program
Group Leader, Radiation Effects and Analysis
Group (REAG), NASA/GSFC
Project Technologist, Living With a Star (LWS)
Space Environment Testbeds (SET)



Outline

- The Space Radiation Environment
- The Effects on Electronics
- The Environment in Action
- NASA Approaches to Commercial Electronics
 - The Mission Mix
 - Flight Projects
 - Proactive Research
- Final Thoughts, Atomic Interactions
 - Direct Ionization

Interaction with Nucleus

- Indirect Ionization
- Nucleus is Displaced

http://www.stsci.edu/hst/nicmos/performance/anomalies/bigcr.html


Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004





The Space Radiation Environment





STARFISH detonation – Nuclear attacks are not considered in this presentation

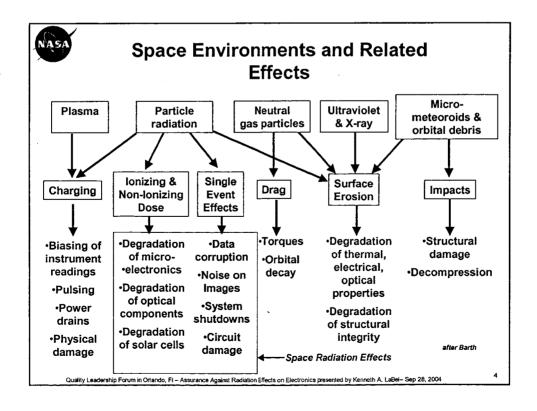


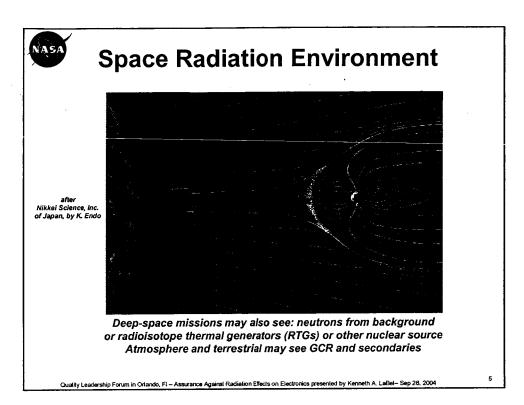


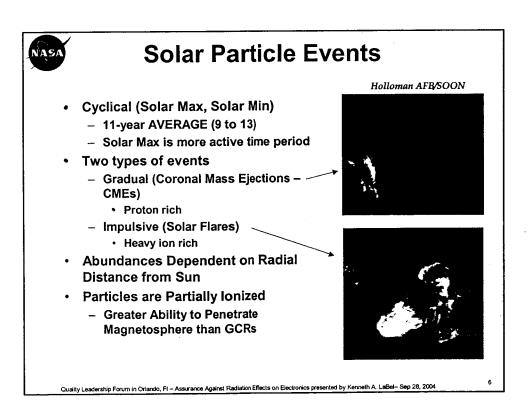

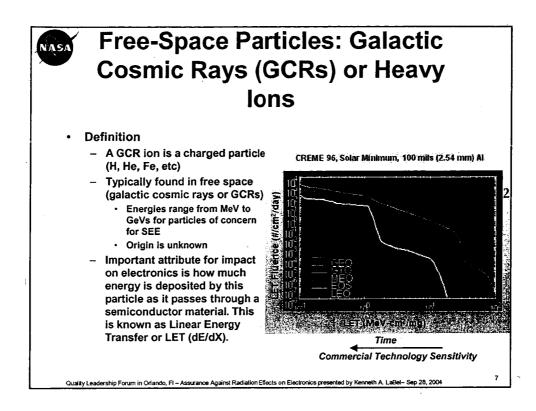

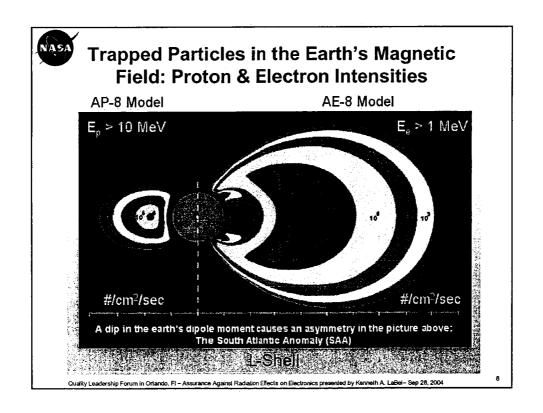

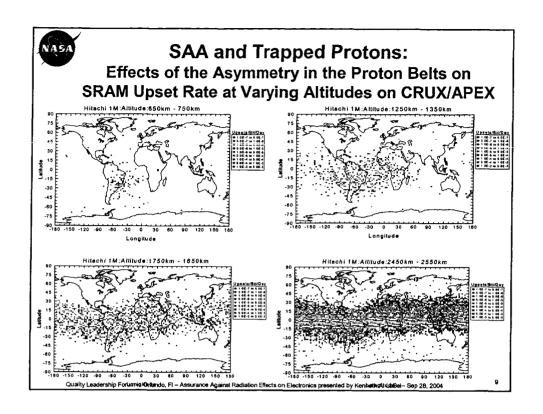


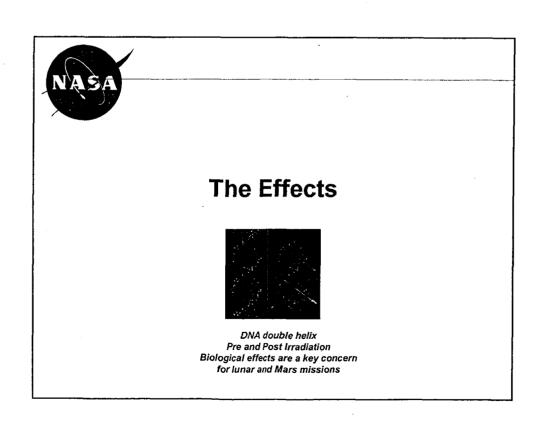



Radiation Effects and Spacecraft

- Critical areas for design in the natural space radiation environment
 - Long-term effects
 - · Total ionizing dose (TID)
 - Displacement damage
 - Transient or single particle effects (Single event effects or SEE)
 - · Soft or hard errors
- Mission requirements and philosophies vary to ensure mission performance
 - What works for a shuttle mission may not apply to a deep-space mission

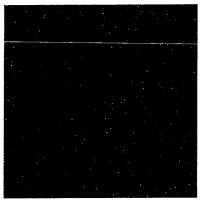

An Active Pixel Sensor (APS) imager under irradiation with heavy ions at Texas A&M University Cyclotron

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel-Sep 28, 2004


..



Total Ionizing Dose (TID)

- Cumulative long term ionizing damage due to protons & electrons
- Effects
 - Threshold Shifts
 - Leakage Current
 - Timing Changes
 - Functional Failures
- Unit of interest is krads(material)
- Can partially mitigate with shielding
 - Low energy protons
 - Electrons



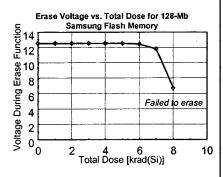



Displacement Damage (DD)

- Cumulative long term non-ionizing damage due to protons, electrons, apprineutrons
- Effects
- Production of defects which desults in device degradation
 - May be similar to TID Dects
 - Optocouplers, sola Cells, CCDs, linear bipolar devices 🎺
- Unit of interest is particle fluence for each energy apped to test energy
 - Non-ion and energy loss (NIEL) is one means of discussing
- Shie wing has some effect depends on logation of device
 - Reduce significant electron and some proton damage





Single Event Effects (SEEs)

- An SEE is caused by a single charged particle as it passes through a semiconductor material
 - Heavy ions
 - · Direct ionization
 - Protons for sensitive devices
 - · Nuclear reactions for standard devices
- Effects on electronics
 - If the LET of the particle (or reaction) is greater than the amount of energy or critical charge required, an effect may be seen
 - · Soft errors such as upsets (SEUs) or transients (SETs), or
 - · Hard (destructive) errors such as latchup (SEL), burnout (SEB), or gate rupture (SEGR)
- Severity of effect is dependent on
 - type of effect
 - system criticality

Destructive event in a COTS 120V DC-DC Converter



Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel - Sep 28, 2004



The Environment in Action


"There's a little black spot on the sun today"







Recent Solar Events – A Few Notes and Implications

- In Oct-Nov of this year, a series of X-class (X-45!) solar events took place
 - High particle fluxes were noted
 - Many spacecraft performed safing maneuvers
 - Many systems experienced higher than normal (but correctable) data error rates
 - Several spacecraft had anomalies causing spacecraft safing
 - Increased noise seen in many instruments
 - Drag and heating issues noted
 - Instrument FAILURES occurred
 - Two known spacecraft FAILURES occurred
- Power grid systems affected, communication systems affected...

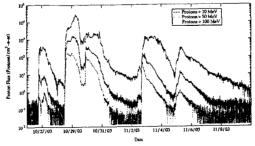

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004

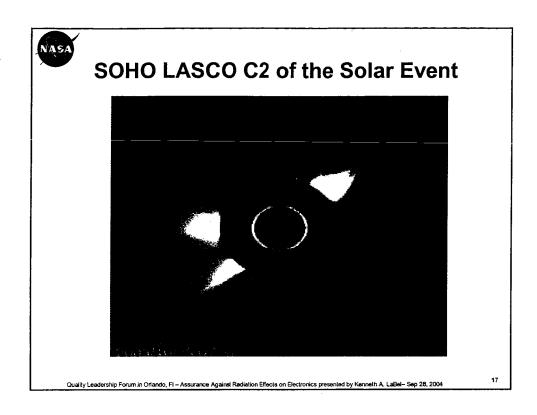

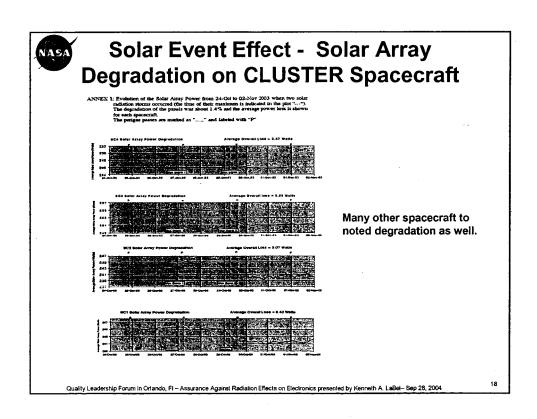



Selected Other Consequences

- Orbits affected on several spacecraft
- · Power system failure
 - Malmo, Sweden
- · High Current in power transmission lines
 - Wisconsin and New York
- Communication noise increase
- FAA issued a radiation dose alert for planes flying over 25,000 ft

A NASA-built radiation monitor that can aid anomaly resolution, lifetime degradation, protection alerts, etc.



Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004

19



NASA Approaches to Electronics: Flight Projects and Proactive Research



It doesn't matter where you go as long as you follow a programmatic assurance approach



NASA Missions – A Wide Range of Needs

- NASA typically has over 200 missions in some stage of development
 - Range from balloon and short-duration low-earth investigations to long-life deep space
 - Robotic to Human Presence
- Radiation and reliability needs vary commensurately



Mars Global Surveyor Dust Storms in 2001

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004

21



Implications of NASA Mix

- Prior to the U.S Vision for Space Exploration
 - >90% of NASA missions required 100 krad(Si) or less for device total ionizing dose (TID) tolerance
 - Single Event Effects (SEEs) were prime driver
 Sensor hardness also a limiting factor
 - Many missions could accept risk of anomalies as long as recoverable over time
- Implications of the new vision are still TBD for radiation and reliability specifics, however,
 - Nuclear power/propulsion changes radiation issues (TID and displacement damage)
 - Long-duration missions such as permanent stations on the moon require long-life highreliability for infrastructure
 - Human presence requires conservative approaches to reliability
 - Drives stricter radiation tolerance requirements and fault tolerant architectures



Lunar footprint Courtesy of NASA archives



22

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel - Sep 28, 2004



A Systematic Approach to Flight Project Radiation Hardness Assurance (RHA)



Size, complexity, and human presence are among the factors im deciding how RHA is to be implemented



NASA Approach to RHA


- With commercial technology sensitivity to SEU increasing and limited radiation hardened offerings, a dual approach to RHA needs to be installed
 - A systems approach at the flight mission level, and
 - Proactive investigation into new technologies

Rockwell/Hawaii 2048x2048 5µm HgCdTe NGST FPA (ARC)



Candidate James Webb Space Telescope (JWST)
IR array preparing for rad tests. The ultra-low
noise requirement of JWST is the driver.

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004

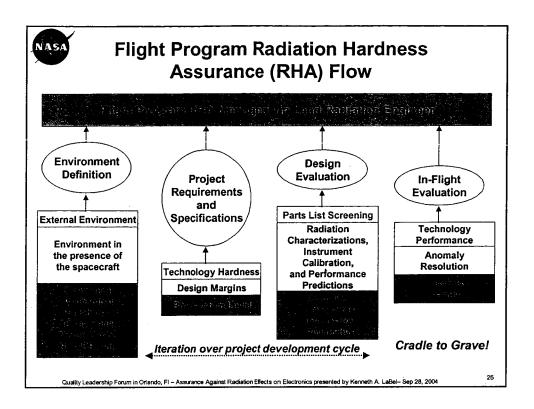



Radiation and Systems Engineering: A Rational Approach for Space Systems

- Define the Environment
 - External to the spacecraft
- Evaluate the Environment
 - Internal to the spacecraft
- Define the Requirements
 - Define criticality factors
- Evaluate Design/Components
 - Existing data/Testing/Performance characteristics
- "Engineer" with Designers
 - Parts replacement/Mitigation schemes
- Iterate Process
 - Review parts list based on updated knowledge

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004



Approach to Insertion of New Electronics



IBM CMOS 8SF ASIC




Microelectronics: Categories


- Microelectronics can be split several ways
 - Digital, analog, mixed signal, other
 - Complementary Metal Oxide Semiconductor (CMOS), Bipolar, etc...
 - Function (microprocessor, memory, ...)
- There are only two commercial foundries (where they build devices) in the US dedicated to building radiation hardened digital devices
 - Efforts within DoD to provide alternate means of developing hardened devices
 - · Hardened-by-design (HBD)
 - · Provides path for custom devices, but not necessarily off-the-shelf devices
 - Commercial devices can have great variance in radiation tolerance from device-to-device and even on multiple samples of same device
 - No guarantees!
 - Analog foundry situation is even worse
- · New technologies have many unknowns
 - Ultra-high speed, nanotechnologies, microelectromechanical systems (MEMS and the optical versions – MOEMS), ...

A MOEMS in action



Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004

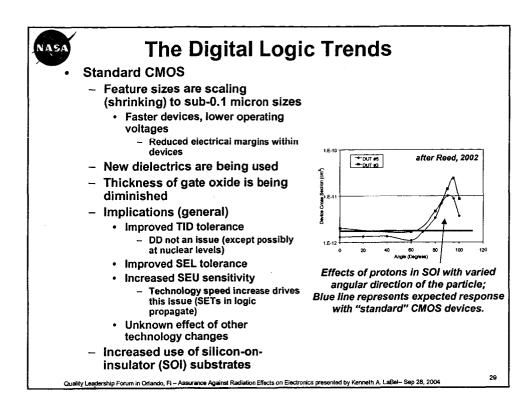


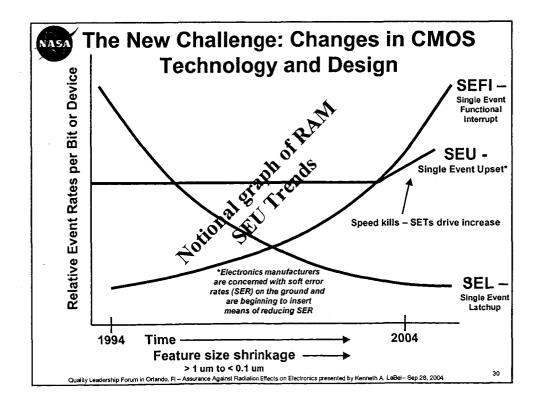



Analog/mixed signal

- Not scaled as aggressively (need higher voltages to get analog range)
 - Efforts to improve electrical performance have reduced reliability and signal margins within the device
 - Increased sensitivity to
 - SETs (noise propagation that can be invasive to operations)
 - The higher the resolution or speed, the worse this becomes
 - · TID and DD
 - Commercial device failure noted as low as 1 krad(Si)
 - » Even short duration missions would have concerns without test data

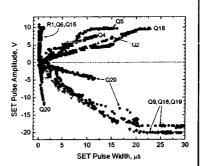

LASER SEU tests on a LM124 Op Amp. Note the variety of transients generated depending on particle arrival point and circuit application


Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004

1




New Technologies - Sample Issues

- · Ultra-high speed
 - Devices that may be relatively tolerant at low-speed (<100 MHz) have vastly increased SEU sensitivity at high-speeds (>1 GHz)
 - Speed can defeat HBD methods
 - New technologies don't fit old models
- Sensors
 - Noise, damage, etc. can limit device performance (such as an imager) and lifetime
 - Small effort at DoD to provide hardened solutions
- MEMS
 - Combined effects of electrical, optical, and mechanical degradation
- · Nanotechnologies
 - A great unknown for radiation effects and protection

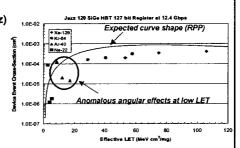

Effects of heavy ions on SiGe devices at 12 GHz speeds; Drawn line represents expected response with "standard" models.

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel-Sep 28, 2004

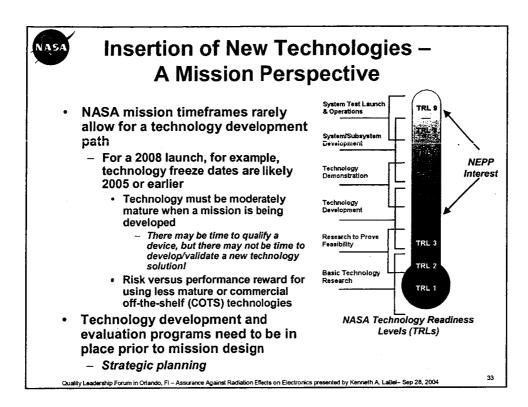



Final Comments and Future Considerations





Technology, Testing, and Flight

- · Technology complicates the tests
 - Speed, Thermal, Fault Isolation, Packaging: die access!, etc
 - · SETs are the "new" effect in digital devices
 - Ultra-low noise science instruments
- Future facility issues
 - Beam structure
 - · Issue: At-speed testing
 - Microbeam
 - Issue: Isolation of errors / Identification of sensitive junctions
 - High energy heavy ions Michigan State
 University (MSU) National Superconducting
 Cyclotron Labs (NSCL) now open for business
 - · Issue: Increased fidelity to space environment
 - Issue: Improved ion penetration (packaging issues!)
 - · Issue: Thermal (open air testing possible)
 - · Issue: Speed (reduced cabling requirements)
- Nanotechnologies? MEMS?
- A proactive radiation test and modeling program is required to allow successful system RHA

outiful andership Forum in Orlando El ... Assurance Against Radiation Effects on Flectronics presented by Kenneth A. I aBel.- Sep 28, 2004

35



Backup Slides



Details on RHA Approach for Flight Projects



Define the Hazard

- The radiation environment external to the spacecraft
 - Trapped particles
 - Protons
 - Electrons
 - Galactic cosmic rays (heavy ions)
 - Solar particles (protons and heavy ions)
- Based on
 - Time of launch and mission duration
 - Orbital parameters, ...
- Provides
 - Nominal and worst-case trapped particle fluxes
 - Peak "operate-through" fluxes (solar or trapped)
 - Dose-depth curve of total ionizing dose (TID)

Note: We are currently using static models for a dynamic environment

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004



Evaluate the Hazard

- Utilize mission-specific geometry to determine particle fluxes and TID at locations inside the spacecraft
 - 3-D ray trace (geometric sectoring)
- Typically multiple steps
 - Basic geometry (empty boxes,...) or single electronics box
 - Detailed geometry
 - Include printed circuit boards (PCBs), cables, integrated circuits (ICs), thermal louvers, etc...
- Usually an iterative process
 - Initial spacecraft design
 - As spacecraft design changes
 - Mitigation by changing box location

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBet - Sep 28, 2004


39



Define Requirements

- Environment usually based on hazard definition with "nominal shielding" or basic geometry
 - Using actual spacecraft geometry sometimes provides a "less harsh" radiation requirement
- Performance requirements for "nominal shielding" such as 70 mils of Al or actual spacecraft configuration
 - TID
 - DDD (protons, neutrons)
 - SEE
 - · Specification is more complex
 - Often requires SEE criticality analysis (SEECA) method be invoked
- Must include radiation design margin (RDM)
 - At least a factor of 2
 - Often required to be higher due to device issues and environment uncertainties (enhanced low dose rate issues, for example)

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBei- Sep 28, 2004

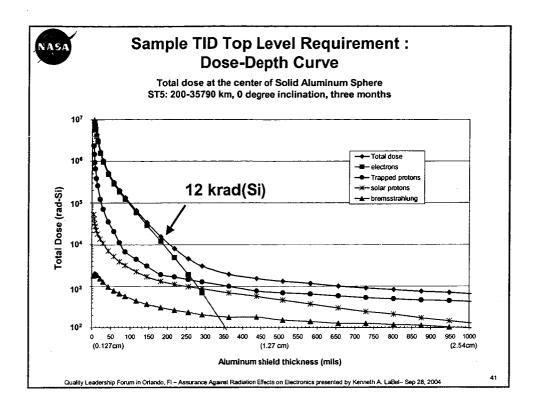



System Requirements - SEE Specifications

- For TID, parts can be given A number (with margin)
 - SEE is much more application specific
- SEE is unlike TID
 - Probabilistic events, not long-term
 - Equal probabilities for 1st day of mission or last day of mission
 - Maybe by definition!

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004



Sample Single Event Effects Specification (1 of 3)

1. Definitions and Terms

Single Event Effect (SEE) - any measurable effect to a circuit due to an ion strike. This includes (but is not limited to) SEUs, SHEs, SELs, SEBs, SEGRs, and Single Event Dielectric Rupture (SEDR).

Single Event Upset (SEU) - a change of state or transient induced by an energetic particle such as a cosmic ray or proton in a device. This may occur in digital, analog, and optical components or may have effects in surrounding interface circuitry (a subset known as Single Event Transients (SETs)). These are "soft" errors in that a reset or rewriting of the device causes normal device behavior thereafter.

Single Hard Error (SHE) - an SEU which causes a permanent change to the operation of a device. An example is a stuck bit in a memory device.

Single Event Latchup (SEL) - a condition which causes loss of device functionality due to a single event induced high current state. An SEL may or may not cause permanent device damage, but requires power strobing of the device to resume normal device operations.

Single Event Burnout (SEB) - a condition which can cause device destruction due to a high current state in a power transistor.

Single Event Gate Rupture (SEGR) - a single ion induced condition in power MOSFETs which may result in the formation of a conducting path in the gate oxide.

Multiple Bit Upset (MBU) - an event induced by a single energetic particle such as a cosmic ray or proton that causes multiple upsets or transients during its path through a device or system.

Linear Energy Transfer (LET) - a measure of the energy deposited per unit length as a energetic particle travels through a material. The common LET unit is MeV*cm²/mg of material (Si for MOS devices, etc.).

Onset Threshold LET ($LET_{lb,0}$) - the minimum LET to cause an effect at a particle fluence of 1E7 ions/cm²(per JEDEC). Typically, a particle fluence of 1E5 ions/cm² is used for SEB and SEGR testing.

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004

43



Single Event Effects Specification (2 of 3)

- 2. Component SEU Specification
- 2.1 No SEE may cause permanent damage to a system or subsystem.
- 2.2 Electronic components shall be designed to be immune to SEE induced performance anomalies, or outages which require ground intervention to correct. Electronic component reliability shall be met in the SEU environment.
- 2.3 If a device is not immune to SEUs, analysis for SEU rates and effects must take place based on LET $_{th}$ of the candidate devices as follows:

Device Threshold	Environment to be Assessed
LET _{th} < 15* MeV*cm²/mg	Cosmic Ray, Trapped Protons, Solar Proton Events
LET _{th} = 15*-100 MeV*cm ² /mg	Galactic Cosmic Ray Heavy Ions, Solar Heavy Ions
LET _{th} > 100 MeV*cm²/mg	No analysis required

- 2.4 The cosmic ray induced LET spectrum which shall be used for analysis is given in Figure TBD.
- 2.5 The trapped proton environment to be used for analysis is given in Figures TBD. Both nominal and peak particle flux rates must be analyzed.
- 2.6 The solar event environment to be used for analysis is given in Figure TBD.
- 2.7 For any device that is not immune to SEL or other potentially destructive conditions, protective circuitry must be added to eliminate the possibility of damage and verified by analysis or test.

*This number is somewhat arbitrary and is applicable to "standard" devices. Some newer devices may require this number to be higher.

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004



Single Event Effects Specification (3 of 3)

- 2. Component SEU Specification (Cont.)
- 2.8 For SEU, the *criticality* of a device in it's specific application must be defined into one of three categories: error-critical, error-functional, or error-vulnerable. Please refer to the /radhome/papers/seecal.htm Single Event Effect Criticality Analysis (SEECA) document for details. A SEECA analysis should be performed at the system level.
- 2.9 The improper operation caused by an SEU shall be reduced to acceptable levels. Systems engineering analysis of circuit design, operating modes, duty cycle, device criticality etc. shall be used to determine acceptable levels for that device. Means of gaining acceptable levels include part selection, error detection and correction schemes, redundancy and voting methods, error tolerant coding, or acceptance of errors in non-critical areas.
- 2.10 A design's resistance to SEE for the specified radiation environment must be demonstrated.
- 3. SEU Guidelines

Wherever practical, procure SEE immune devices. SEE immune is defined as a device having an LET_{th} > 100 MeV*cm²/mg.

If device test data does not exist, ground testing is required. For commercial components, testing is recommended on the flight procurement lot.

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel - Sep 28, 2004

45



Notes on System Requirements

- Requirements do NOT have to be for piecepart reliability
 - For example, may be viewed as a "data loss" specification
 - Acceptable bit error rates or system outage
 - Mitigation and risk are system trade parameters
 - Environment needs to be defined for YOUR mission (can't use prediction for different timeframe, orbit, etc...)

46

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004



Radiation Design Margins (RDMs)

- How much risk does the project want to take?
- Uncertainties that must be considered
 - Dynamics of the environment
 - Test data
 - · Applicability of test data
 - Does the test data reflect how the device is used in THIS design?
 - · Device variances
 - Lot-to-lot, wafer-to-wafer, device-to-device
- Risk trade
 - Weigh RDM vs. cost/performance vs. probability of issue vs. system reliability etc...

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBet- Sep 28, 2004


47



Evaluate Design/Component Usage

- Screen parts list
 - Use existing databases
 - RADATA, REDEX, Radhome, IEEE TNS, IEEE Data Workshop Records, Proceedings of RADECS, etc.
 - · Evaluate test data
 - Look for processes or products with known radiation tolerance (beware of SEE and displacement damage!)
 - BAE Systems, Honeywell Solid State Electronics, UTMC, Harris, etc.
- Radiation test unknowns or non-RH guaranteed devices
- Provide performance characteristics
 - Usually requires application specific information: understand the designer's sensitive parameters
 - · SEE rates
 - TID/DDD


Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004

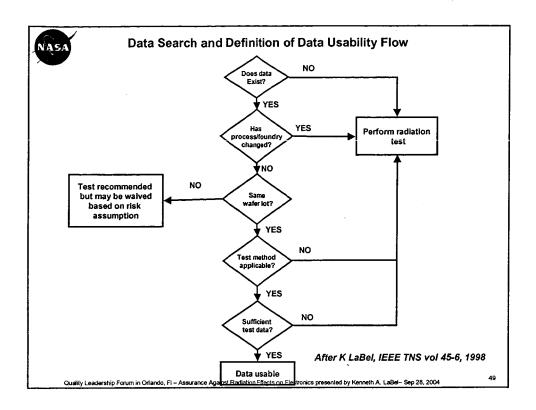



System Radiation Test Requirements

- All devices with unknown characteristics should be ground radiation tested (TID and SEE)
- All testing should be performed on flight lot, if possible
- Testing should mimic or bound the flight usage, if possible
 - Beware of new technology issues...

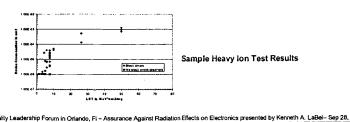



Engineer with the Designer

- Just because a device's radiation hardness may not meet requirements, does NOT necessarily make it unusable
 - Many concerns can be dealt with using mitigative approaches
 - · Hardened by design (HBD) approaches
 - Circuit level tolerance such as error detection and correction (EDAC) on large memory arrays
 - · Mechanical approaches (shielding)
 - Application-specific effects (ex., single bad telemetry point or device is only on once per day for 10 seconds or degradation of parameter is acceptable)
 - System tolerance such as 95% "up-time"
 - The key is what is the effect in THIS application
 - If mitigation is not an option, may have to replace device

Warning: Not all effects can be mitigated safely

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel - Sep 28, 2004

51



Destructive Conditions - Mitigation

- Recommendation 1: Do not use devices that exhibit destructive conditions in your environment and application
- · Difficulties:
 - May require redundant components/systems -
 - Conditions such as low current SELs may be difficult to detect
- Mitigation methods
 - Current limiting
 - Current limiting w/ autonomous reset
 - Periodic power cycles
 - Device functionality check
- Latent damage is also a grave issue
 - "Non-destructive" events may be false!

52

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel-Sep 28, 2004



Latent Damage: Implications to SEE

- SEL events are observed in some modern CMOS devices
 - Device may not fail immediately, but recover after a power cycling
- However, in some cases
 - Metal is ejected from thin metal lines that may fail catastrophically at some time after event occurrence



SEL test qualification methods need to take latent damage into consideration;
Post-SEL screening techniques required;
Mitigative approaches may not be effective

Quality Leadership Forum in Orlando, FI - Assurance Against Radiation Effects on Electronics presented by Kenneth A. LaBel- Sep 28, 2004